

SKYROCKET TOYS AURA

TOUCH-CONTROL LIGHT DRONE



 
 
LED
LIGHT
SHOW

6+

Light up the room with a 360° display of prismatic light! The Aura projects kaleidoscopic patterns, both up and down, illuminating your ceilings and floors at the same time. Aura's mesmerizing display of rainbow colors makes it hard to look away!


CHARGING

If already ON, press and HOLD the power button until the drone turns OFF. Plug the charging cable into the drone and powered USB port. A fully-charged battery provides around 6 minutes of flying time.

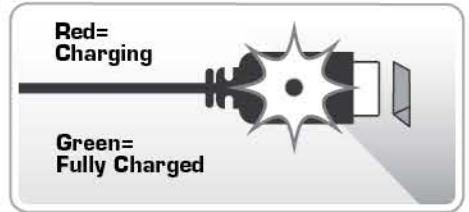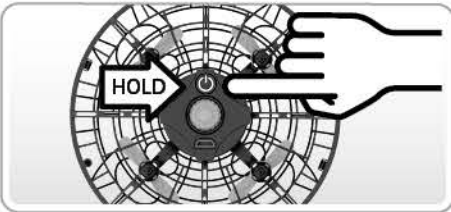

During flight, the Aura drone's LEDs will start to flash RED if power is running low. Charge battery with the included USB charger in an isolated area, away from heat or moisture. Do not modify, heat, or get wet in any way. Recharge ONLY with the provided charger.

 POWER ON AND OFF

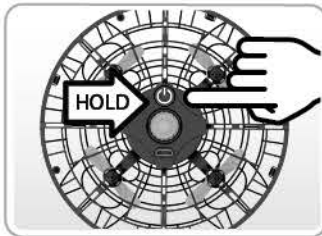


To turn ON, hold Aura level in your hand, then press and momentarily hold the power button until the drone lights up. To turn OFF, press and hold again until the drone turn off.

TOSS LAUNCH



Hold the Aura drone upright in the palm of your hand. Give the drone a slight toss upwards then quickly drop your hand downward. The Aura drone will automatically turn on and hover.

 GRAB AND STOP

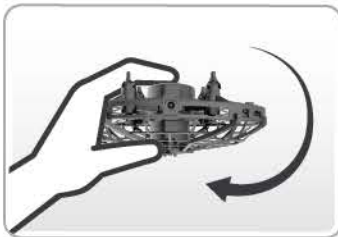

Stop the Aura drone at any time by quickly grabbing it in mid-flight and immediately flipping it upside down. The drone will automatically stop.

BATTERY SPECIFICATIONS & CAUTIONS

- This toy contains batteries that are non-replaceable.
- Batteries are only to be charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short circuited.
- Batteries are to be inserted using correct polarity.

This device complies with PART 15 of the FCC Rules. Operation is subject to the following two conditions. (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna - Increase the separation between the equipment and receiver - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected - Consult the dealer or an experienced radio/TV technician for help.

THIS PRODUCT CONTAINS A LITHIUM-POLYMER BATTERY 3.7V 380mAh (Non-replaceable):

LiPo batteries have a severe risk of fire and injury if they are improperly handled or misused. They may explode, overheat or ignite. Read all following precautions and instructions regarding the care and use of LiPo batteries.

The LiPo battery is only to be used with the drone and charger included with this product.

- Keep away from flammable materials.
- Do not expose to direct sunlight.
- Do not place in fire or leave in hot places.
- Keep dry and away from water.
- Never throw in a fire or attempt to open outer casing.
- Never charge battery unattended. When charging battery you should always remain in constant observation to monitor the charging process and react to potential problems that may occur.
- Disconnect with the charging wire if the battery is fully charged.
- Never store or charge battery inside the car in extreme temperatures, since extreme temperature could ignite fire.
- Use caution to avoid puncture of the battery. Puncture of battery may cause a fire.

LiPo Battery Disposal: LiPo batteries must be recycled or disposed of properly. They should not be disposed of with other household waste. Check your local laws and regulations for correct recycling and/or battery disposal.

THIS PRODUCT CONTAINS A LITHIUM-POLYMER BATTERY 3.7V 380mAh:

 
LiPo batteries have a severe risk of fire and injury if they are improperly handled or misused. Read all enclosed instructions, warnings and precautions regarding the care, use and disposal of LiPo batteries. The enclosed LiPo battery is only to be used with the drone and charger included with this product.

SKYROCKET TOYS 30-DAY LIMITED WARRANTY


Skyrocket warrants to the original purchaser that this product is free of defects in materials or workmanship for 30 days from the original purchase. This warranty only applies to defects in material and workmanship and is not valid if the product has been misused or not assembled and maintained per instructions. Proof of defect or malfunction must be provided and verified, along with original sales receipt with date. For quickest resolution, defective product should be returned to the original point of purchase for exchange or refund. If you have questions or difficulties, please contact Skyrocket Toys customer service department at support@skyrockettoys.com.

PUSH IT! BUMP IT! TOUCH CONTROL

Touch Control allows you to control Aura without a remote. Just push or bump Aura in any sideways direction that you want to fly.

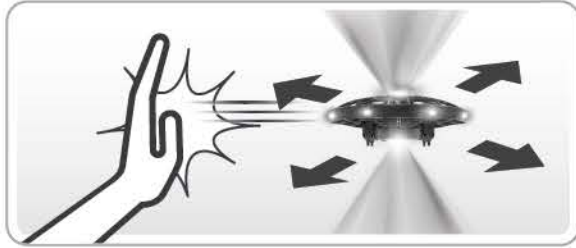


 If you think Aura is flying too low, position your hand underneath the drone and it will automatically fly higher. Don't worry if it flies too high. Aura will automatically descend back into reach within a few moments.

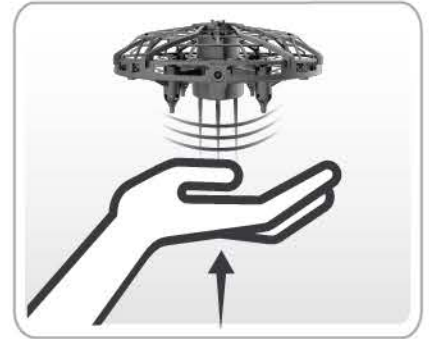

MULTIPLE LIGHT PATTERNS INCLUDING ADAPTIVE MODE

 Once Aura has been turned ON, quick-press the power button to toggle through a variety of light modes. Each mode features different colors and strobing patterns. Some modes are adaptive, meaning that the colors and patterns will change every time you bump Aura during flight!

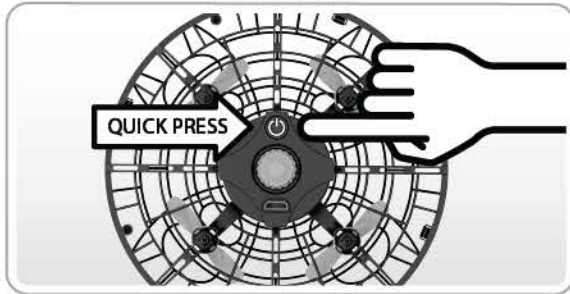

ALSO AVAILABLE FROM SKY VIPER



VISTA

- Stream & Record HD Video
- Surface Scan™ Position Hold
- Auto Launch, Land & Hover



VECTOR

- Lightweight & Fast
- One-Touch Flips & Rolls
- Find-My-Plane Audio Tracer



TYPER

- 2X The Power
- Racing Speed & Agility
- One-Touch Stunts



DASH

- Small Size - Big Performance
- One-Touch Stunts
- Auto Launch, Land & Hover



NOVA

- RGB Color Morphing Rotors
- Light FX Patterns incl. Flight Adaptive Light Mode
- Auto Launch, Land & Hover

ADULT SUPERVISION REQUIRED:

Read all enclosed instructions, warnings and precautions regarding the care and use of LiPo batteries. An adult should periodically check this product and the LiPo battery to ensure no damage or hazards exist. Spinning blades can cause injury. Adequate flying space is required. Keep a safe distance away from streets, public thoroughfares, bodies of water and powerlines. Be mindful of spectators. Read all enclosed information before operating.

WARNING: This toy produces flashes that may trigger epilepsy in sensitized individuals.

Conforms to product safety standards ASTM F963. Not suitable for children under 3 years due to small parts. Remove and discard wire ties before giving this product to children. Product colors and styles may vary from those shown. Retain this package and instruction for future reference.

The battery charger used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been required.

The information presented in these instructions are believed to be currently accurate and reliable; however no warranty, either express or implied, is made. Any recommendations or suggestions are made without warranty or guarantee, since among other reasons, the conditions of storage and use are beyond our control.

Questions or comments? Please email support@skyrockettoys.com

©2024 Skyrocket LLC, Los Angeles, CA 90292 USA. All rights reserved. Skyrocket and their respective logos are trademarks and/or registered trademarks of Skyrocket LLC. All other trademarks, logos and copyrights are the property of their respective owners, and there is no relationship express or implied with Skyrocket LLC.



MADE IN CHINA.

SKYROCKET.

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.