



3+

Freeze Dance Mode

Press and hold the nose for 1 second to switch to Dance Mode (purple eyes). When the whistle blows, shake Pomsies to the beat of the music. The faster you shake, the faster the music plays. When you hear another whistle, freeze! Hold the nose for another second to return to Pet Mode.

2 WAYS TO PLAY

Press the nose to wake Pomsies™. Hold the nose for 1 second to switch between modes.

Pet Mode

When you first turn on Pomsies, they are in Pet Mode (teal eyes). Touch and interact with them and they react!

Touch hidden sensors to make Pomsies react!



Understanding Pomsies


Eye Colour	What it means	What to do
Teal	Happy	<p>Pomsies love to be petted. Try petting their back to make them purr. Interact with Pomsies in other ways by touching their head and mouth, tapping their nose or by shaking them. Pomsies will reward your affection with rainbows!</p> <p>SECRET TOOT: Press and hold their mouth and back at the same time for 1 second and they might just let out a TOOT! Oops!</p>
Yellow	Hungry	Feed them by pressing on their mouth area. Feed them too much and they might get the hiccups!
Green	Hiccups	Uh oh! Pomsies have the hiccups. Shake them up to make the hiccups go away.
Blue	Sneezy, Coughing or Shivering	<p>Oh no! Pomsies are not feeling too well. If they are sneezing, shivering or coughing, help nurture them back to health (teal).</p> <p>Sneezing: Tap their nose to make them feel better!</p> <p>Coughing: Cover their mouth to avoid spreading germs!</p> <p>Shivering: They are cold! Hug them and touch their back to warm them up!</p>
Pink	Silly	Pomsies are feeling a little silly and giggly. Hehehe... keep tickling them to get all the sillies out!
Rainbow	SUPER HAPPY!	As you care for Pomsies, their eyes will glow Rainbow! After 5 rainbows, they will surprise you with a happy song. Shake them to the beat of the music or speed up their jingle by shaking faster.

CONTENTS: 1 Pomsies™ Pet, 1 Brush, and 1 Instruction Sheet

NOTE: Remove "Try Me" pull tab before use.

Battery Info

- Have an adult install fresh batteries. Pomsies require 1 AAA Alkaline (LR03) 1.5V battery.
- To change / insert battery, flip Pomsies pet upside down, open felt pouch and turn screw to the left to unfasten battery door.

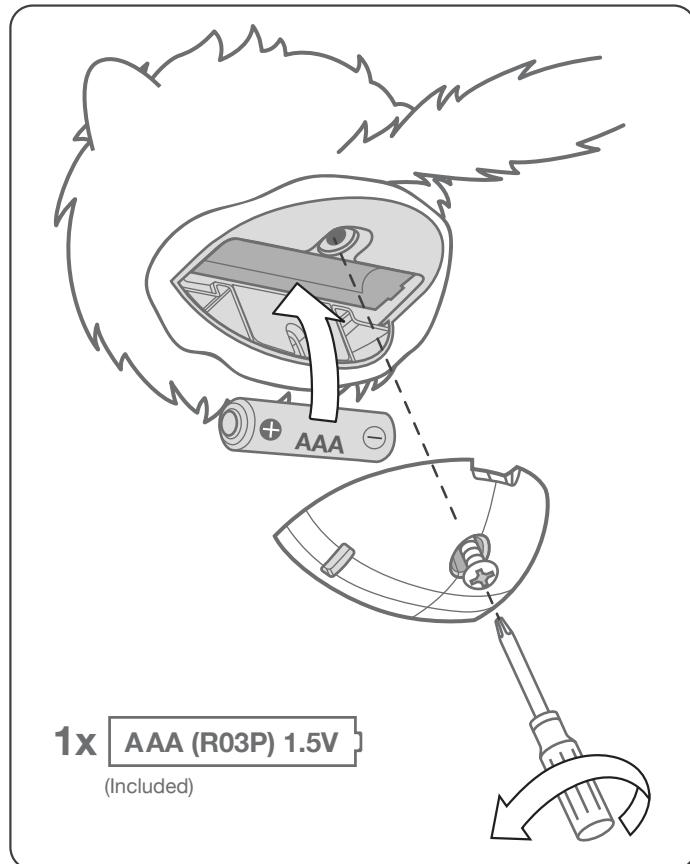

Important Battery Info:

- Suggest use of only fresh alkaline batteries of the required size and recommended type.
- Do not use rechargeable batteries.
- Please respect the correct polarity, (+) and (-).
- Do not attempt to recharge non-rechargeable batteries.
- Do not dispose of batteries into fire.
- The supply terminals are not to be short-circuited.
- Remove exhausted battery from the toy.
- Battery should be replaced by adults.
- Battery should be recycled or disposed of as per state and local guidelines.
- Remove battery when storing toy.

Troubleshooting

Replacing Pomsies with fresh battery will resolve most troubleshooting issues. If problems continue, please reach out to our customer service department:
support@bandaistore.co.uk

Product Care

- Do not immerse Pomsies in water or any other form of liquid.
- Do not throw or kick Pomsies as this may damage mechanical functionality.
- Do not leave Pomsies in extreme heat or freezing temperatures, as this can result in permanent mechanical damage.
- Surface wipe clean with a damp cloth and keep moisture away from battery compartment.

FCC Statement

This device complies with PART 15 of the FCC Rules. Operation is subject to the following two conditions. (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna - Increase the separation between the equipment and receiver - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected - Consult the dealer or an experienced radio/TV technician for help.



This device is marked with the selective sorting symbol on waste electrical and electronic equipment. This means that this product should be supported by a selective collection system accordance with applicable regulations in order to be either recycled or dismantled in order to reduce any impact on the environment. The batteries, submitted to a specific collection system, must be removed from the product and disposed of separately. When that the batteries are not to be extracted, the product must be delivered to an appropriate collection center for recycling is complete. Electrical and electronic products as well as batteries that have not been sorted before disposal are potentially dangerous for the environment and human health due to the presence of hazardous substances. For more information, contact your local or regional government.

SKYROCKET

© 2018 Skyrocket LLC, Los Angeles, CA 90066 USA. All rights reserved. Pomsies and Skyrocket and their respective logos are trademarks and/or registered trademarks of Skyrocket LLC. All other trademarks, logos and copyrights are the property of their respective owners, and there is no relationship express or implied with Skyrocket LLC.

Imported by Bandai S.A.S. Tour W 102 Terrasse Boieldieu 92085 Paris La Défense Cedex France

Distributed by Bandai (UK) Ltd, 37-39 Kew Foot Road, Richmond, Surrey, TW9 2SS

Questions or comments?
Please call **01702 208151** or visit www.Bandai.co.uk

Product colours and styles may vary from those shown. Retain this package for future reference.

MADE IN CHINA

