

5+

GRUMBLIES

CONTENTS: 1 GRUMBLIES CREATURE
1 INSTRUCTION SHEET

~~DON'T~~
MAKE THEM
MELTDOWN!

GRRR!

BURP!

HE
HE
HE

GRUMBLIES ARE MISCHIEVOUS AND SHORT-TEMPERED.
THE MORE YOU MISHANDLE THEM, THE GRUMPIER THEY GET!
GRUMPIER AND GRUMPIER, UNTIL THEY HAVE A COMPLETE MELTDOWN!

THE BELLY BUTTON

PRESS THE BELLY TO WAKE GRUMBLIES, BUT BE WARNED--
PRESSING THE BELLY EVEN MORE MAY CAUSE GASSY SIDE EFFECTS!
PRESS AND HOLD THE BELLY FOR 3 SECONDS TO PUT GRUMBLIES TO SLEEP.



MELTDOWN
IN PROGRESS!!

PUSH THEM TOO FAR AND
GRUMBLIES GO INTO FULL
MELTDOWN, SPUTTERING AND
SHAKING UNCONTROLLABLY.
JUST LET THEM GO!

COLLECT
THEM ALL!



BOLT



HYDRO



TREMOR



SCORCH

HOW TO PLAY WITH GRUMBLIES

SHAKE

SHAKING GRUMBLIES BACK AND FORTH
WILL REALLY SET THEM OFF.
TRY SHAKING THEM AND HOLDING THEM
UPSIDE DOWN AT THE SAME TIME!

FLIP

TURNING GRUMBLIES UPSIDE DOWN WILL
MAKE THEM DIZZY AND NAUSEOUS.
WATCH OUT FOR BURPING, BELCHING
OR UP-CHUCKING!


TAP

SLAPPING GRUMBLIES AROUND WITH YOUR
HANDS WILL RESULT IN TIZZY-FITS OF RAGE.
PROCEED WITH CAUTION, A MELTDOWN MAY
BE CLOSER THAN YOU THINK!

NOTE: Remove “Try Me” pull tab before use.

BATTERY INFO

Have an adult install 3 fresh AA batteries. To insert or change batteries, turn Grumbliies™ upside down, and twist screwdriver to left to remove hardcover battery door.

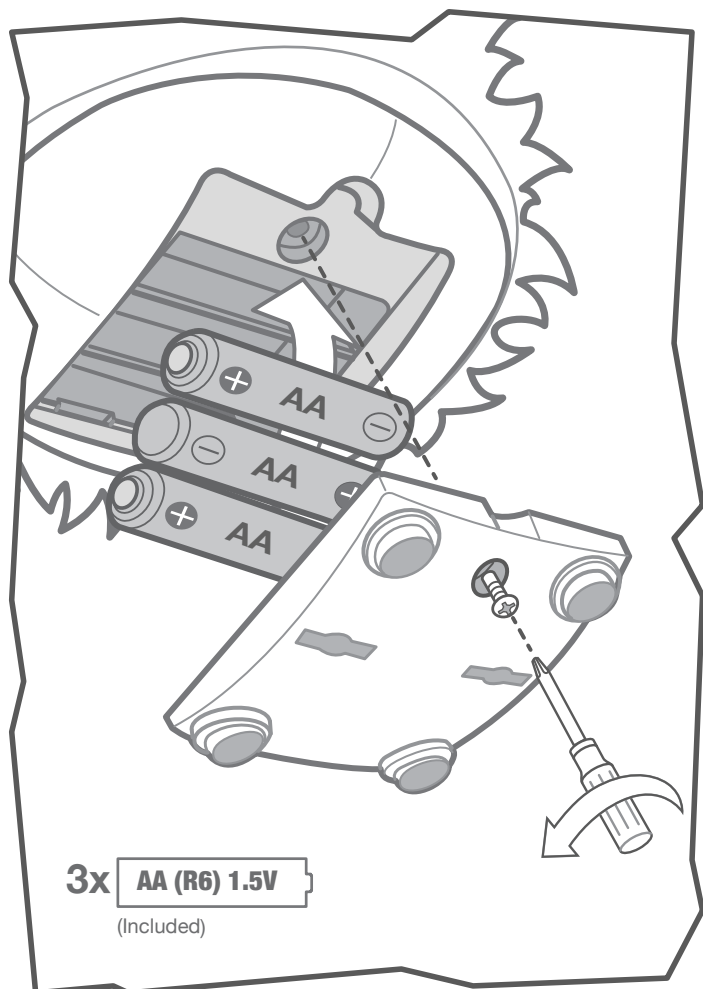

IMPORTANT BATTERY INFO:

- Recommend using only fresh alkaline batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries [standard (Carbon-Zinc), Alkaline or rechargeable] or rechargeable batteries of different capacities.
- Remove rechargeable batteries from the toy before recharging them.
- Rechargeable batteries are only to be charged under adult supervision.
- Please respect the correct polarity, (+) and (-).
- Do not try to recharge non-rechargeable batteries.
- Do not dispose of batteries into fire.
- Replace all batteries of the same type/brand at the same time.
- The supply terminals are not to be short-circuited.
- Remove exhausted batteries from the toy.
- Batteries should be replaced by adults.
- Batteries should be recycled or disposed of as per state and local guidelines.
- Remove batteries when storing toy.

PRODUCT CARE

- Do not immerse Grumbliies™ in water or any other form of liquid.
- Do not throw or kick Grumbliies™ as this may damage mechanical functionality.
- Do not leave Grumbliies™ in extreme heat or freezing temperatures, as this can result in permanent mechanical damage.
- Surface wipe clean with a damp cloth and keep moisture away from battery compartment.

FCC STATEMENT

This device complies with PART 15 of the FCC Rules. Operation is subject to the following two conditions. (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

• **CAUTION:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

• **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna - Increase the separation between the equipment and receiver - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected - Consult the dealer or an experienced radio/TV technician for help.

TROUBLESHOOTING:

1. Replacing your Grumbliies™ with fresh batteries will resolve most troubleshooting issues. If problems continue, please reach out to our customer service department: customerservice@skyrocketon.com.



This device is marked with the selective sorting symbol on waste electrical and electronic equipment. This means that this product should be supported by a selective collection system accordance with applicable regulations in order to be either recycled or dismantled in order to reduce any impact on the environment. The batteries, submitted to a specific collection system, must be removed from the product and disposed of separately. When that the batteries are not to be extracted, the product must be delivered to and appropriate collection center for recycling is complete. Electrical and electronic products as well as batteries that have not been sorted before disposal are potentially dangerous for the environment and human health due to the presence of hazardous substances. For more information, contact your local or regional government.

PATENT PENDING

SKYROCKET

© 2018 Skyrocket LLC, Los Angeles, CA 90066 USA. All rights reserved. Grumbliies and Skyrocket and their respective logos are trademarks and/or registered trademarks of Skyrocket LLC. All other trademarks, logos and copyrights are the property of their respective owners, and there is no relationship express or implied with Skyrocket LLC.

Questions or comments? Please call 888-674-5650 or visit www.grumbliiesmeltdown.com. Product colors and styles may vary from those shown. Retain this package for future reference.

MADE IN CHINA



WARNING:
CHOKING HAZARD—Small parts.
Not for children under 3 yrs.



US - G2