



LUMIES' MOOD AND ACTIONS CHANGE DEPENDING ON WHAT MODE YOU'RE IN, SO BRING ON THE COLOR-CHARGED FUN!

WAKE LUMIES UP BY PRESSING THEIR NOSE!

"WHAT COLOR SHOULD WE BE TODAY?"





"LET'S MIX SOME BEA<u>TS!</u>"

LUMIES TURN COLORS INTO BEATS! THE MORE COLORS YOU TOUCH, THE MORE CRAZY FUN MIXES LUMIES CREATE!

2

"LET'S PLAY RAINBOW TAG!"

PICK ANY COLORED OBJECT. WHEN LUMIES SHOW THAT SAME COLOR, TOUCH IT QUICKLY TO MATCH! COLORS WILL FLASH FASTER AND FASTER.



"LET'S PLAY LUMIE SAYS!"

LUMIES WILL FLASH COLORS IN A PATTERN. CAN YOU REMEMBER THE PATTERN AND TOUCH THE SAME COLORS IN THE SAME ORDER?

3

*PRESS NOSE FOR 3 SECONDS TO TURN LUMIES OFF



WHEN LUMIES GLOW A COLOR, FIND AND TOUCH A MATCHING COLOR AS FAST AS POSSIBLE! HOW MANY COLORS CAN YOU GRAB IN BEFORE TIME RUNS OUT?

> PRESS NOSE



LET'S GET STARTED!

MAKE LUMIES MATCH COLORS BY PRESSING THE SENSOR BUTTON AGAINST ANY COLORED OBJECT. MAKE SURE THE SENSOR BUTTON IS UNOBSTRUCTED AND COMPLETELY COVERS THE COLOR YOU WANT TO MATCH.

CONTENTS

1 Lumies Friend, 1 Hair Clip Comb, 1 Instruction Sheet

NOTE: Remove "Try Me" pull tab before use.

TROUBLE SHOOTING


Replacing Lumies with fresh battery will resolve most troubleshooting issues. If problems continue, please reach out to our customer service department: customerservice@skyrocketon.com

PRODUCT CARE

- Do not immerse Lumies in water or any other form of liquid.
- Do not throw or kick Lumies as this may damage mechanical functionality.
- Do not leave Lumies in extreme heat or freezing temperatures, as this can result in permanent mechanical damage.
- Surface wipe clean with a damp cloth and keep moisture away from battery compartment.

BATTERY INFO

- Have an adult install fresh batteries. Lumies require
 3 AAA Alkaline (LR03) 1.5V batteries.
- To change / insert battery, flip Lumie upside down, and turn screw to the left to unfasten battery door.

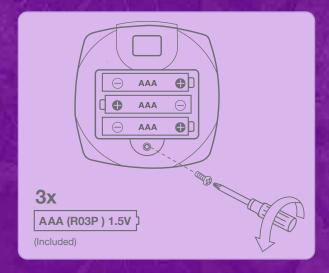

IMPORTANT BATTERY INFO

- Suggest use of only fresh alkaline batteries of the required size and recommended type.
- · Do not use rechargeable batteries.
- Do not mix old and new batteries, different types of batteries [standard (carbon-zinc), Alkaline or rechargeable] or rechargeable batteries of different capacities.
- Please respect the correct polarity, (+) and (-).
- Do not attempt to recharge non-rechargeable batteries.
- Do not dispose of batteries into fire.
- The supply terminals are not to be short-circuited.
- Remove exhausted battery from the toy.
- · Battery should be replaced by adults.
- Battery should be recycled or disposed of as per state and local guidelines.
- · Remove battery when storing toy.



DISCOVER MORE AT POMSIES.COM

PSST!

HIDDEN INSIDE LUMIES ARE 50+ SECRET SOUNDS! UNLOCK THESE SURPRISES BY TOUCHING CERTAIN COLORS IN A CERTAIN ORDER.

Try this cheery pattern:



HERE'S A SURPRISE THAT'S LOL!



DISCOVED MODE AT DOMSIES COM

COLOR-MATCHING ACCURACY MAY VARY DEPENDING ON THE TEXTURE AND FINISH OF SCANNING SURFACE, ESPECIALLY PRINTED SURFACES.

FCC STATEMENT

This device complies with PART 15 of the FCC Rules. Operation is subject to the following two conditions. (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna - Increase the separation between the equipment and receiver - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected - Consult the dealer or an experienced radio/TV technician for help.

This device is marked with the selective sorting symbol on waste electrical and electronic equipment. This means that this product should be supported by a selective collection system accordance with applicable regulations in order to be either recycled or dismantled in order to reduce any impact on the environment. The batteries, submitted to a specific collection system, must be removed from the product and disposed of separately. When that the batteries are not to be extracted, the product must be delivered to and appropriate collection center for recycling is complete. Electrical and electronic products as well as batteries that have not been sorted before disposal are potentially dangerous for the environment and human health due to the presence of hazardous substances. For more information, contact your local or regional government.



SKYROCKET

© 2019 Skyrocket LLC, Los Angeles, CA 90066 USA. All rights reserved. Lumies and Skyrocket and their respective logos are trademarks and/or registered trademarks of Skyrocket LLC. All other trademarks, logos and copyrights are the property of their respective owners, and there is no relationship express or implied with Skyrocket LLC.

Questions or comments?

Please call 888-674-5650 or visit www.Pomsies.com

Product colors and styles may vary from those shown. Retain this package for future reference.

MADE IN CHINA